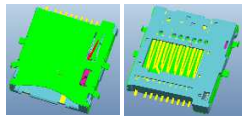
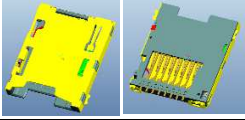

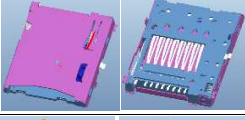
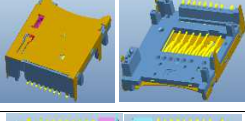
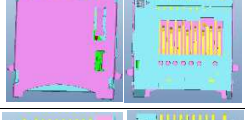

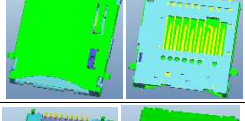

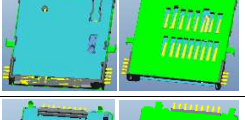
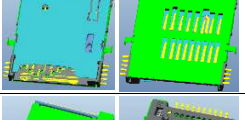
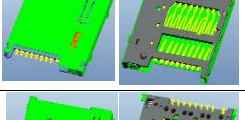
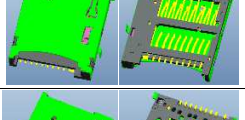
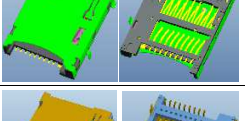

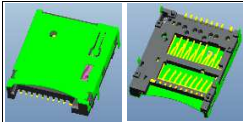
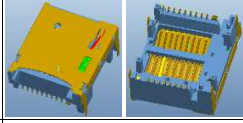
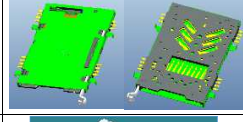

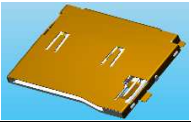


Micro SD Series

ITEM	P/N	Description	Drawing	Specification							Dimension		
				STD /RVS	Pin Count	Pitch	Type	Center High	Pin No.	Remark	L	W	H
1	43-42507-00811RHF	Micro SD 掀盖式 (H=1.90)		/	/	/	板上	1.55	/	/	14.5	16.05	2.675
2	43-42146-00911RHF	Micro SD Push H1.85 外焊型		/	/	/	板上	1.5	/	/	14.5	16.05	1.85
3	43-42478-00911RHF	Micro SD Push H2.10		/	/	/	板上	1.8	/	/	14.5	16.05	2.1
4	570A11-00XH	Micro SD Push H1.28		/	/	/	板上	1	/	/	14.05	13.1	1.28
5	43-42177-01011RHF	Micro SD Push H1.45		/	/	/	板上	1.13	/	/	14.95	14.1	1.45
6	570A02-00XH	Micro SD Push H2.20		/	/	/	板上	1.9	/	/	14.7	14.8	1.8
7	43-42188-00911RHF	Micro SD Push H 1.85 W/O CD		/	/	/	板上	1.58	/	/	15.25	14.05	1.85
8	570918-00XH	Micro SD PUSH内焊 带检测PIN		/	/	/	板上	1.58	/	/	15.25	14.05	1.85
9	43-42685-00901RHF	Micro SD Push H2.00		/	/	/	板上	1.75	/	/	15.1	15	2
10	43-42614-00911RHF	Micro sd Card SINK=0.85mm		/	/	/	破板	0.33	/	/	15.85	16.7	1.8
11	43-42730-00901RHF-WT	Micro SD Push H2.05 外壳DIP		/	/	/	板上	1.7	/	/	15.2	14.7	2.05
12	43-42578-00811RHF-IN	Micro SD H1.45推杆式		/	/	/	板上	0.75	/	/	16.55	15.5	1.45
13	5709B5-005H1000R-R	Micro SD H1.90推杆式		/	/	/	板上	1.05	/	/	17.75	16.7	1.90
14	43-42906-01001RHF-R	Micro SD PUSH沉板 1.85		/	/	/	破板	-1.05	/	/	14.7	15.7	1.85

15	570A01-00XH	Micro SD PUSH沉板 0.98		/	/	/	破板	-0.18	/	/	14.7	15.7	1.50
16	570919-00XH	Micro SD PUSH H1.50 conn 新款		/	/	/	板上	1.15	/	/	15.7	15	1.5
17	570A07-016H	Micro SD PUSH H2.0- 4		/	/	/	板上	1.68	/	/	14.7	14.8	2
18	570A09-00XH	Micro SD PUSH H1.50-2		/	/	/	板上	1.18	/	/	14.7	14.8	1.5
19	570913-00XH	Micro SD PUSH H3.7		/	/	/	板上	3.2	/	/	14.8	13.9	3.72
20	570A03-011H	Micro SD PUSH 反向 沉板1.35		/	/	/	破板	-0.78	/	/	15.5	15.7	1.5
21	570A15-00XH	Micro SD PUSH 反向 沉板1.60		/	/	/	破板	-1.03	/	/	15.5	15.7	1.5
22	570A21-00XH	Micro SD PUSH 反向 沉板0.80		/	/	/	破板	-0.23	/	/	15.5	15.7	1.5
23	570J16-004H	Micro SD4.0 Push H1.50反向型		/	/	/	板下	0.6	/	/	15.3	13.9	1.5
24	570JB5-002H1000R-R	Micro SD4.0 Push 反向 沉板0.65		/	/	/	破板	-0.15	/	/	15.3	13.9	1.5
25	570J13-001H	Micro SD4.0 Push 反向 沉板1.09		/	/	/	破板	-0.59	/	/	15.3	13.9	1.5
26	570J07-00XH	Micro SD4.0 Push H1.50		/	/	/	板上	0.93	/	/	16.18	14.52	1.5
27	570KB5-001H4000R-WT	Micro SD4.0 Push H1.50-2		/	/	/	板上	0.98	/	/	14.8	13.74	1.5
28	570J24-002H	Micro SD4.0 Push H1.67		/	/	/	板上	1.17	/	/	14.8	13.74	1.69
29	570J02-00XH	Micro SD4.0 Push H2.0		/	/	/	板上	1.66	/	/	14.6	15.6	2

30	570J14-00XH	Micro SD4.0 Push H2.27		/	/	/	板上	1.73	/	/	14.2	13.8	2.27
31	43-42870-01903RHF-R	Micro SD4.0 Push H3.70		/	/	/	板上	3.4	/	/	14.8	13.8	3.72
32	570F09-00XH	Nano SIM+Micro SD H1.65 WITH TRAY		/	/	/	破板	0.04	/	/	25.25	19.41	1.65
33	5708B5-004H2000R-KF	Micro SD H1.28 CARD		/	/	/	板上	1.72	/	/	13.06	14.03	1.28
34	570958-003H	MICRO SD PUSH PUSH H=1.88mm CONN		/	/	/	板上	1.22	/	/	15.3	13.8	1.22